



SOUNDGEAR™

POWERED BY Starkey Hearing Technologies




*Wherever sound is a problem,
SoundGear can help*

TRUST YOUR EARS TO SOUNDGEAR

Whether you're in the woods, at the range or on the factory floor, hearing clearly is key to your success and safety. Yet the competing need to protect your hearing from the damaging sound of gun blasts, power tools and industrial machines creates a unique noise management challenge.

SoundGear solves that challenge.

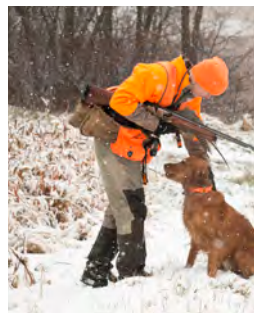



HIGH-DEFINITION SOUND ENHANCEMENT & AUTOMATIC NOISE SUPPRESSION



SoundGear represents the latest advancements in electronic hearing protection. This unique family of 100 percent digital products enhances environmental awareness while also protecting your hearing from loud noises like gun blasts and engines.

Made by Starkey Hearing Technologies — America's premier provider of hearing solutions — SoundGear instruments feature advanced digital technology capable of enhancing sound eight times over traditional hearing protection products. At the same time, it uses seamless sound activated compression to trigger instant and automatic suppression of loud impulse and continuous noises.





HUNTERS & SHOOTERS

It's the ideal solution to protect your hearing from muzzle blasts, while helping you hear clearly to optimize communication, success and safety in the woods or on the range.



INDUSTRIAL WORKERS

SoundGear protects your hearing from the noise of power tools, engines and other industrial machines, while optimizing hearing to enable better communication, performance and safety on-site, in the shop or on the factory floor.



MILITARY PERSONNEL & POLICE OFFICERS

Law enforcement officials, tactical teams and more use SoundGear to protect their ears from muzzle blasts and explosives, while enabling digital sound enhancement to optimize awareness at all times in a simulator, on the range or live fire environment.

SOUNDGEAR FEATURES

- Dynamic digital protection for your ears
- High-definition sound reproduction
- Up to eight times sound enhancement over traditional hearing protection products
- Noise Reduction Rating (NRR) between 24dB and 26dB depending on model
- Seamless sound-activated compression automatically suppresses noises
 - over 95dB in our recreational model
 - over 80dB in our industrial model
- All-day, easy-to-wear comfort

ELECTRONIC CUSTOM FIT



SoundGear Custom products are for those who refuse to compromise when it comes to performance and personalization. Each pair is custom molded to the wearer's ears, and features the most advanced 100 percent digital hearing protection and enhancement technology on the market.



TECHNICAL SPECIFICATIONS

HUNTER & SHOOTER MODEL

NRR	Amplification	Suppression at
24-26dB	30dB	95dB

SILVER

- Volume Control
- 1 Digital Listening Mode (Normal)

PLATINUM

- Volume Control
- 4 Digital Listening Modes (Normal, High Frequency Boost + Max Wind Management, Telecoil, Mute)

Our complete kit contains:

- Zipper carrying case
- One (1) pair of SoundGear electronic hearing protection devices
- Black removable lanyard system
- Two (2) packs of batteries (Size 13)
- One (1) cleaning brush
- Two (2) packs HearClear wax protection
- 1-year Worry-Free repair warranty
- 30-day, risk-free trial*

Available color options



*30-day, risk-free trial starts from receipt date

ELECTRONIC INSTANT-FIT IN-THE-CANAL



SoundGear In-the-Canal is the smallest and lightest dynamic digital hearing protection product on the market. It's ideal for the hunter or shooter looking for an edge — or industrial workers looking for all-day comfort. Ready to wear right out of the box, it rests discreetly inside your ear to deliver natural wind reduction and superior sound quality.

TECHNICAL SPECIFICATIONS

HUNTER & SHOOTER MODEL

NRR	Amplification	Suppression at
<i>25dB</i>	<i>15dB</i>	<i>93dB</i>

INDUSTRIAL MODEL

NRR	Amplification	Suppression at
<i>25dB</i>	<i>8dB</i>	<i>80dB</i>



Our complete kit contains:

- Zipper carrying case
- One (1) pair of SoundGear electronic hearing protection devices
- Two (2) pairs of orange silicone sleeves - (1) small (1) large
- Two pairs of black silicone sleeves - (1) small (1) large
- Two (2) packs of batteries (Size 10)
- One (1) cleaning brush
- 1-year Worry-Free repair warranty
- 30-day, risk-free trial*

Available with Orange and Black Sleeves



NON-ELECTRONIC CUSTOM-FIT HEARING PROTECTION

As the recognized expert in custom hearing instruments, Starkey Hearing Technologies and SoundGear integrates the same breakthrough manufacturing and technology innovation into our earplug solutions that are customized for every patient. The result is the best custom fit hearing protection on the market.



SOLID EAR PLUGS

Custom fit solid earplugs are made with super soft high strength silicone and provide outstanding noise protection in a variety of recreational and occupational environments where high levels of noise are present.

TECHNICAL SPECIFICATIONS

NRR
27-29dB



FILTERED EAR PLUGS

Commonly referred to as musician or industrial earplugs, these custom fit earplugs attenuate across all frequencies rather than just low-and mid-range frequencies, making music and environmental sounds sound much clearer and natural. These are available with multiple filter options including a 10dB, 17dB, 26dB, impulse or solid filter.

NRR
10-26dB*



HIGH-FREQUENCY NOISE FILTERS *(Hocks Noise Braker)*

These custom earplugs contain a patented acoustical chamber and filter to attenuate sound to appropriate levels in the work place or on the range.

NRR
19-22dB

Available in 21 different colors. Option of swirling 3 colors together per pair.

*dB varies based on filter chosen





SoundGear Powered by Starkey Hearing Technologies
6700 Washington Avenue South · Eden Prairie, MN 55344

800.769.8605

SOUNDGEAR.COM

